5. Printed Circuit Board Diagram

5-1 DSP1

* TOP VIEW

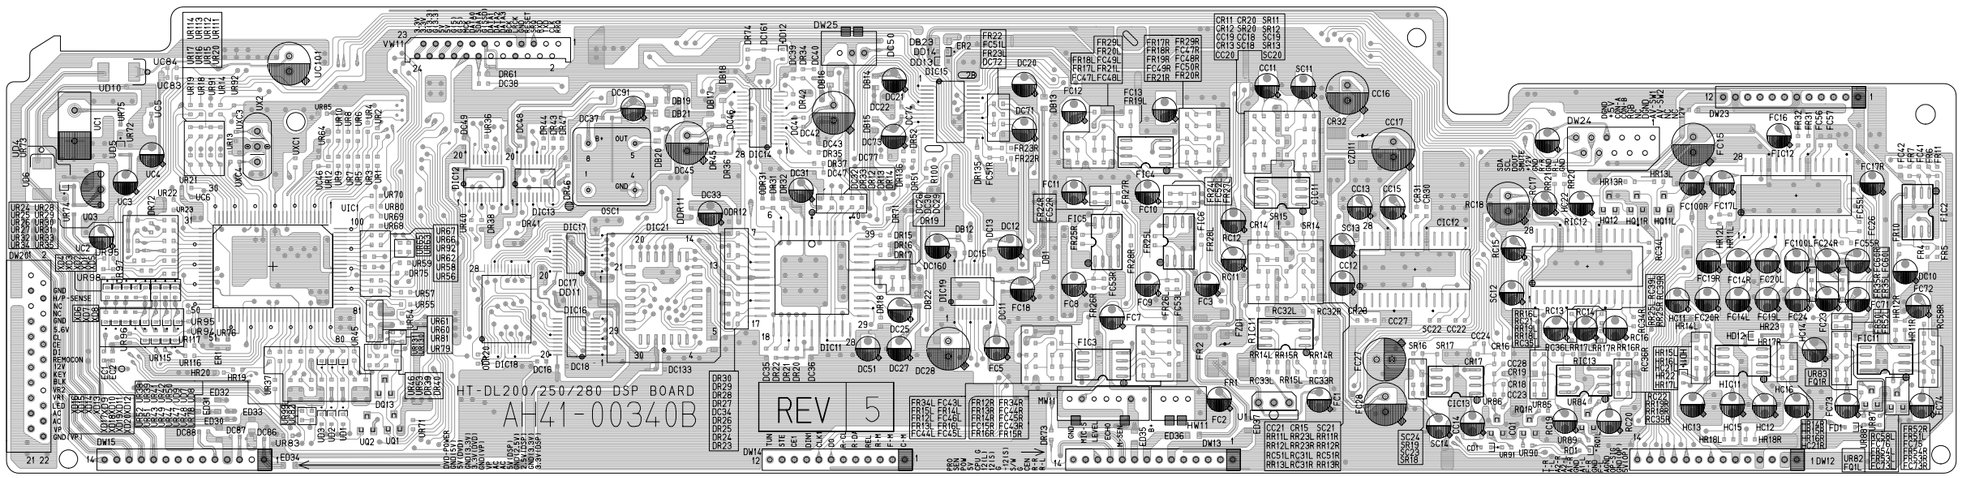

* BOTTOM VIEW

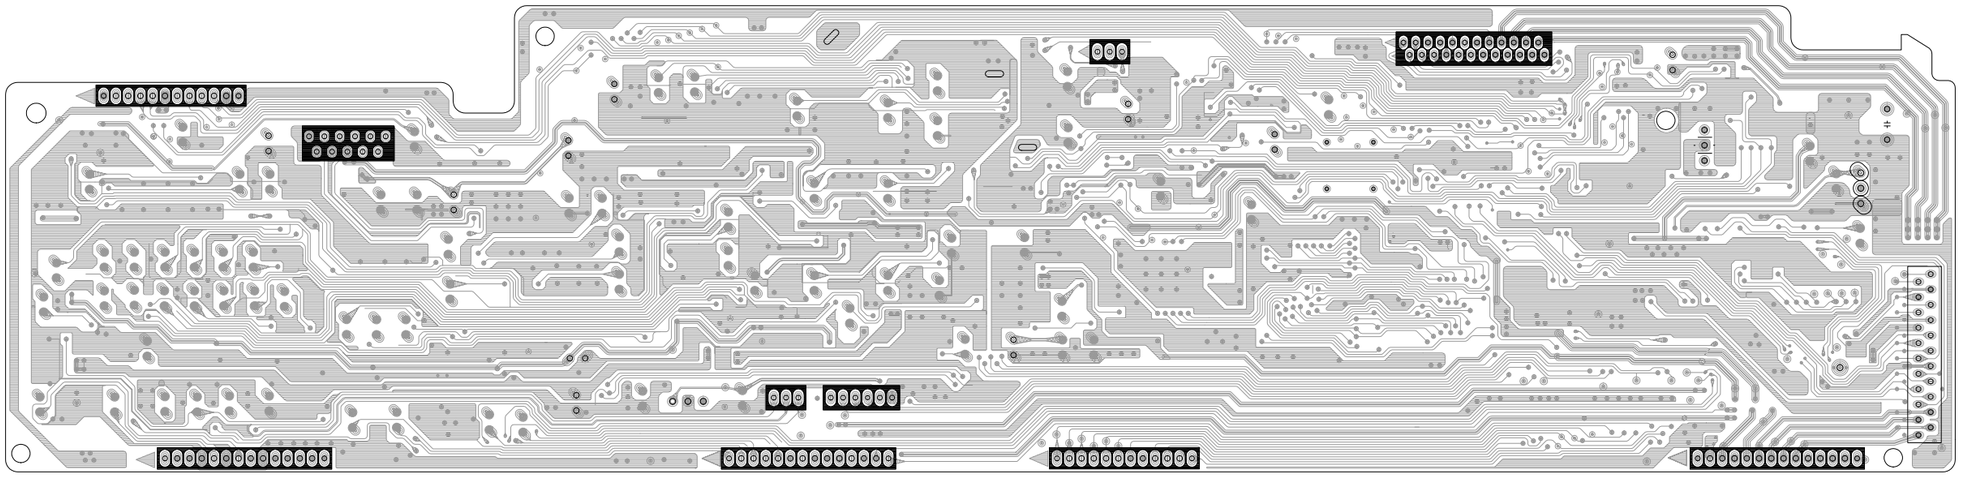

5-2 FRONT

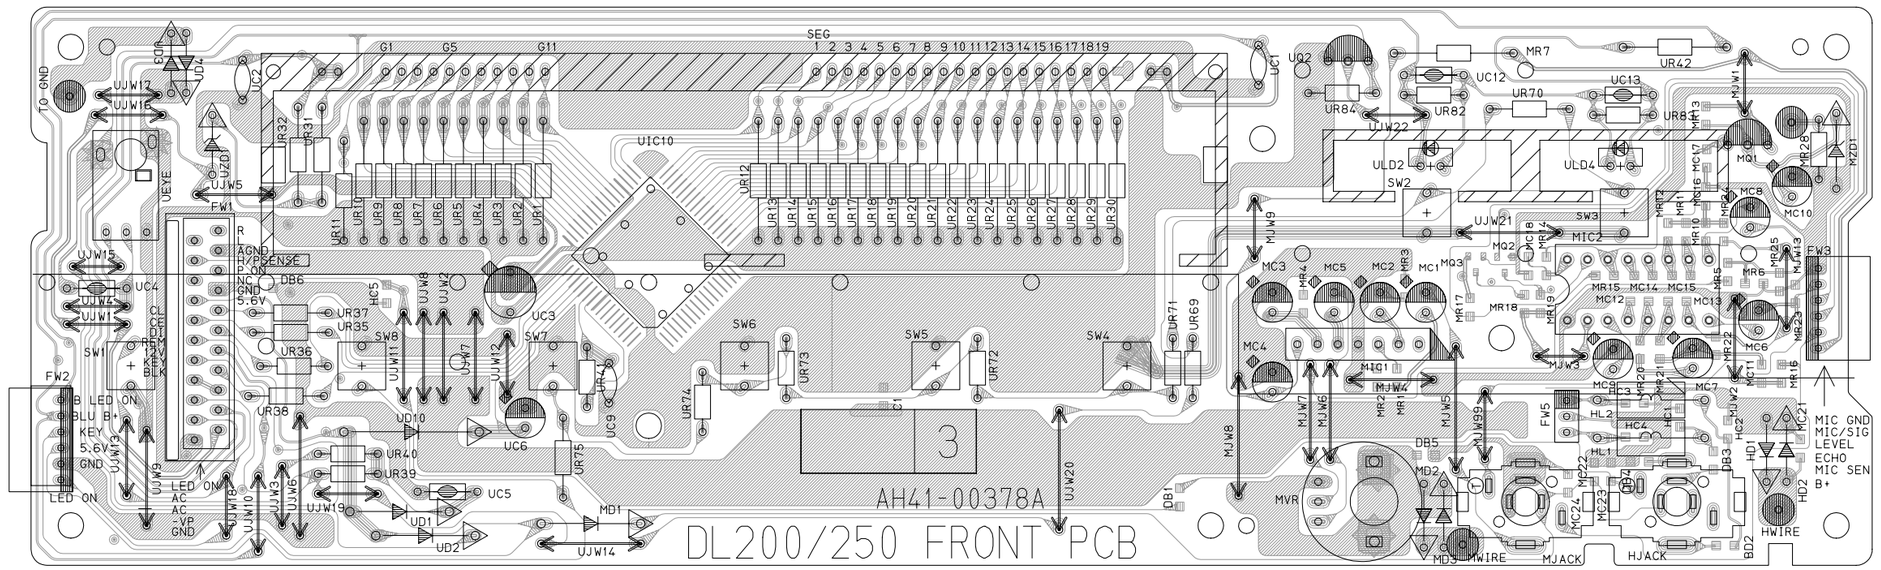

5-3SCART JACK(EURO)

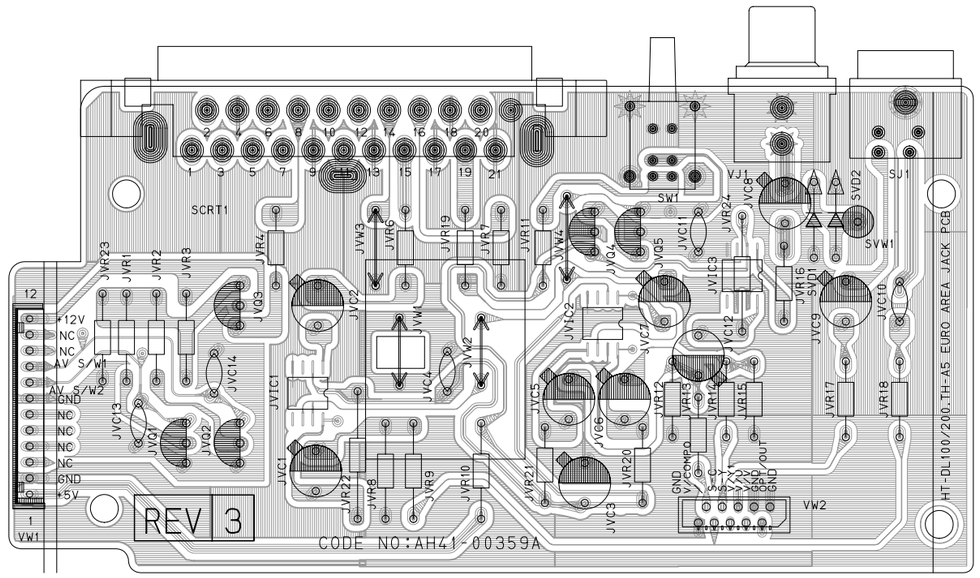

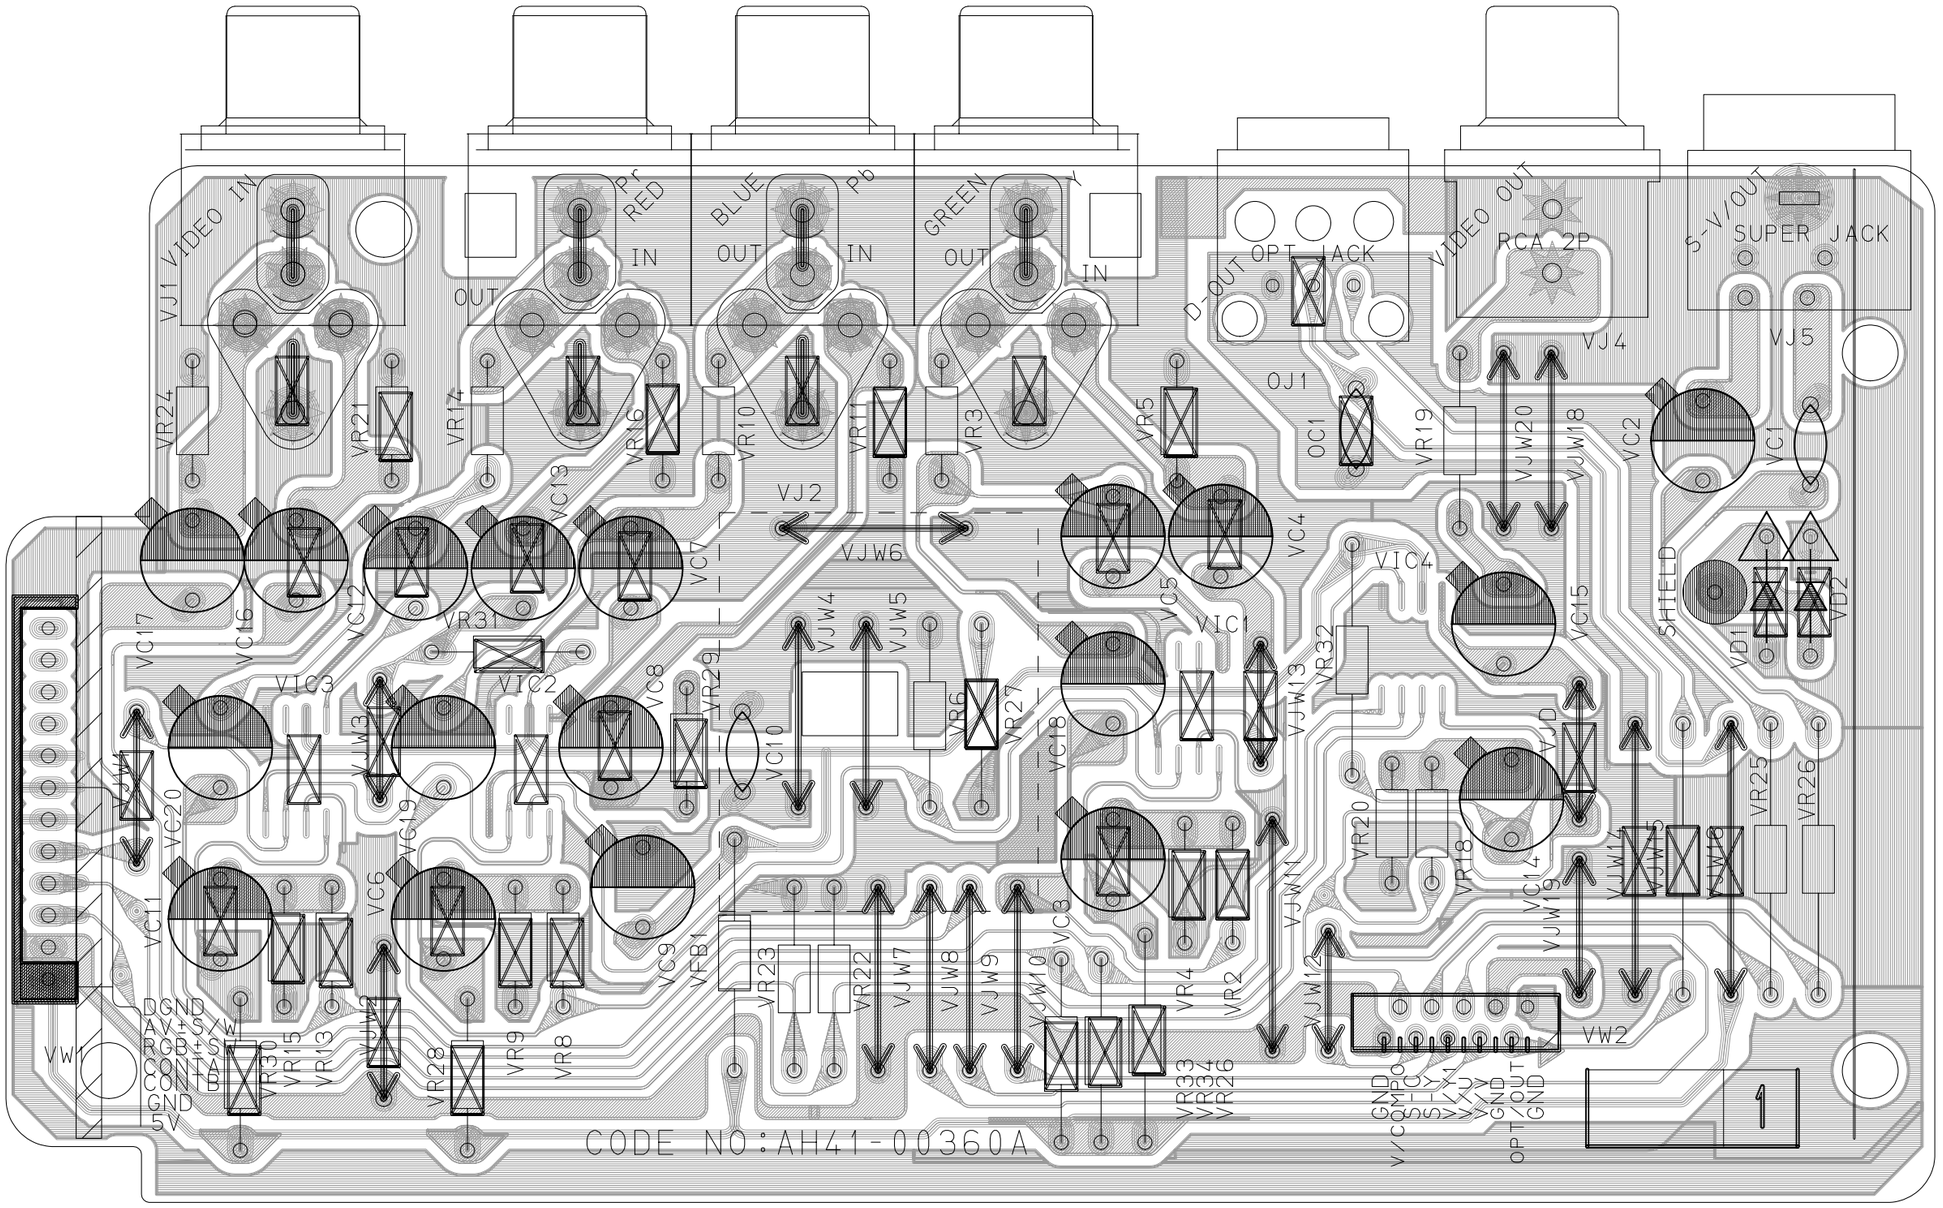
VJ1 VIDEO IN
OUT
Pr
RED
IN
OUT
Pb
BLUE
IN
OUT
Y
GREEN
IN
D-OUT OPT JACK
VIDEO OUT
RCA 2P
5-V/OUT
SUPER JACK
VJ4
VJ5
OJ1
VJ2
VJW6
VIC1
VIC2
VIC3
VIC4
VR24
VR21
VR17
VR16
VR10
VR11
VR3
VR5
VR19
VR31
VR29
VR6
VR27
VR32
VR20
VR18
VR25
VR26
VR23
VR22
VR4
VR2
VR33
VR34
VR26
VR30
VR15
VR13
VR28
VR9
VR8
VC1
VC2
VC3
VC4
VC5
VC6
VC7
VC8
VC9
VC10
VC11
VC12
VC13
VC14
VC15
VC16
VC17
VC18
VC19
VC20
VJW1
VJW2
VJW3
VJW4
VJW5
VJW7
VJW8
VJW9
VJW10
VJW11
VJW12
VJW13
VJW14
VJW15
VJW16
VJW17
VJW18
VJW19
VJW20
VJD
VFB1
VW1
VW2
DGND
AV+S/W
RGB+S
CONTA
CONTB
GND
5V
SHIELD
VD1
VD2
CODE NO:AH41-00360A

5-5 MAIN

* TOP VIEW

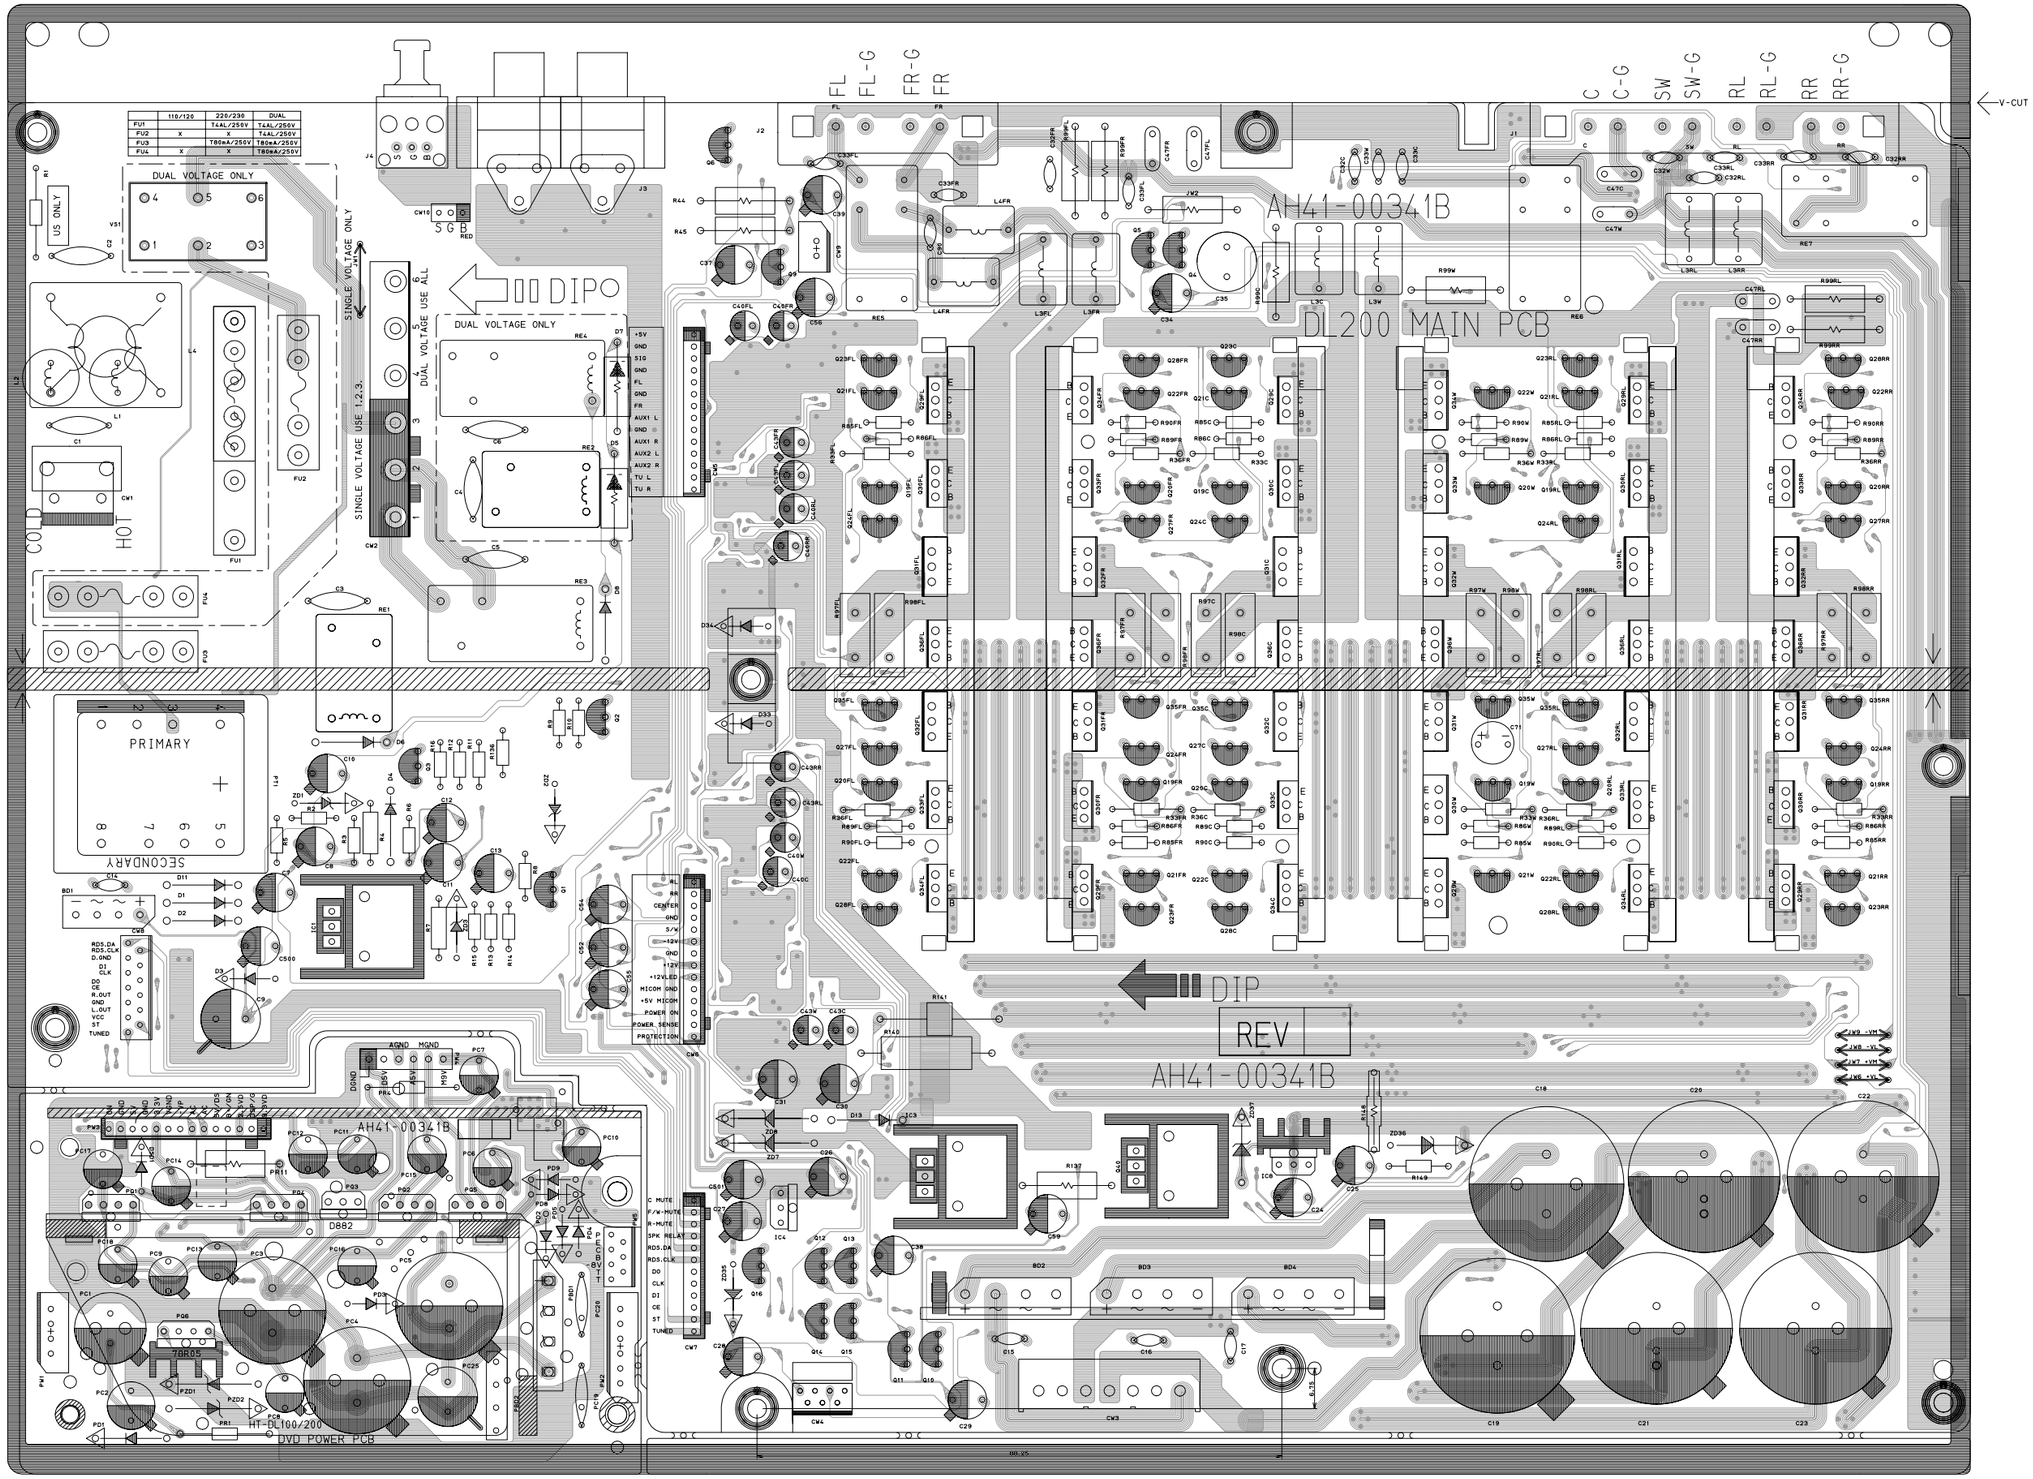

* BOTTOM VIEW

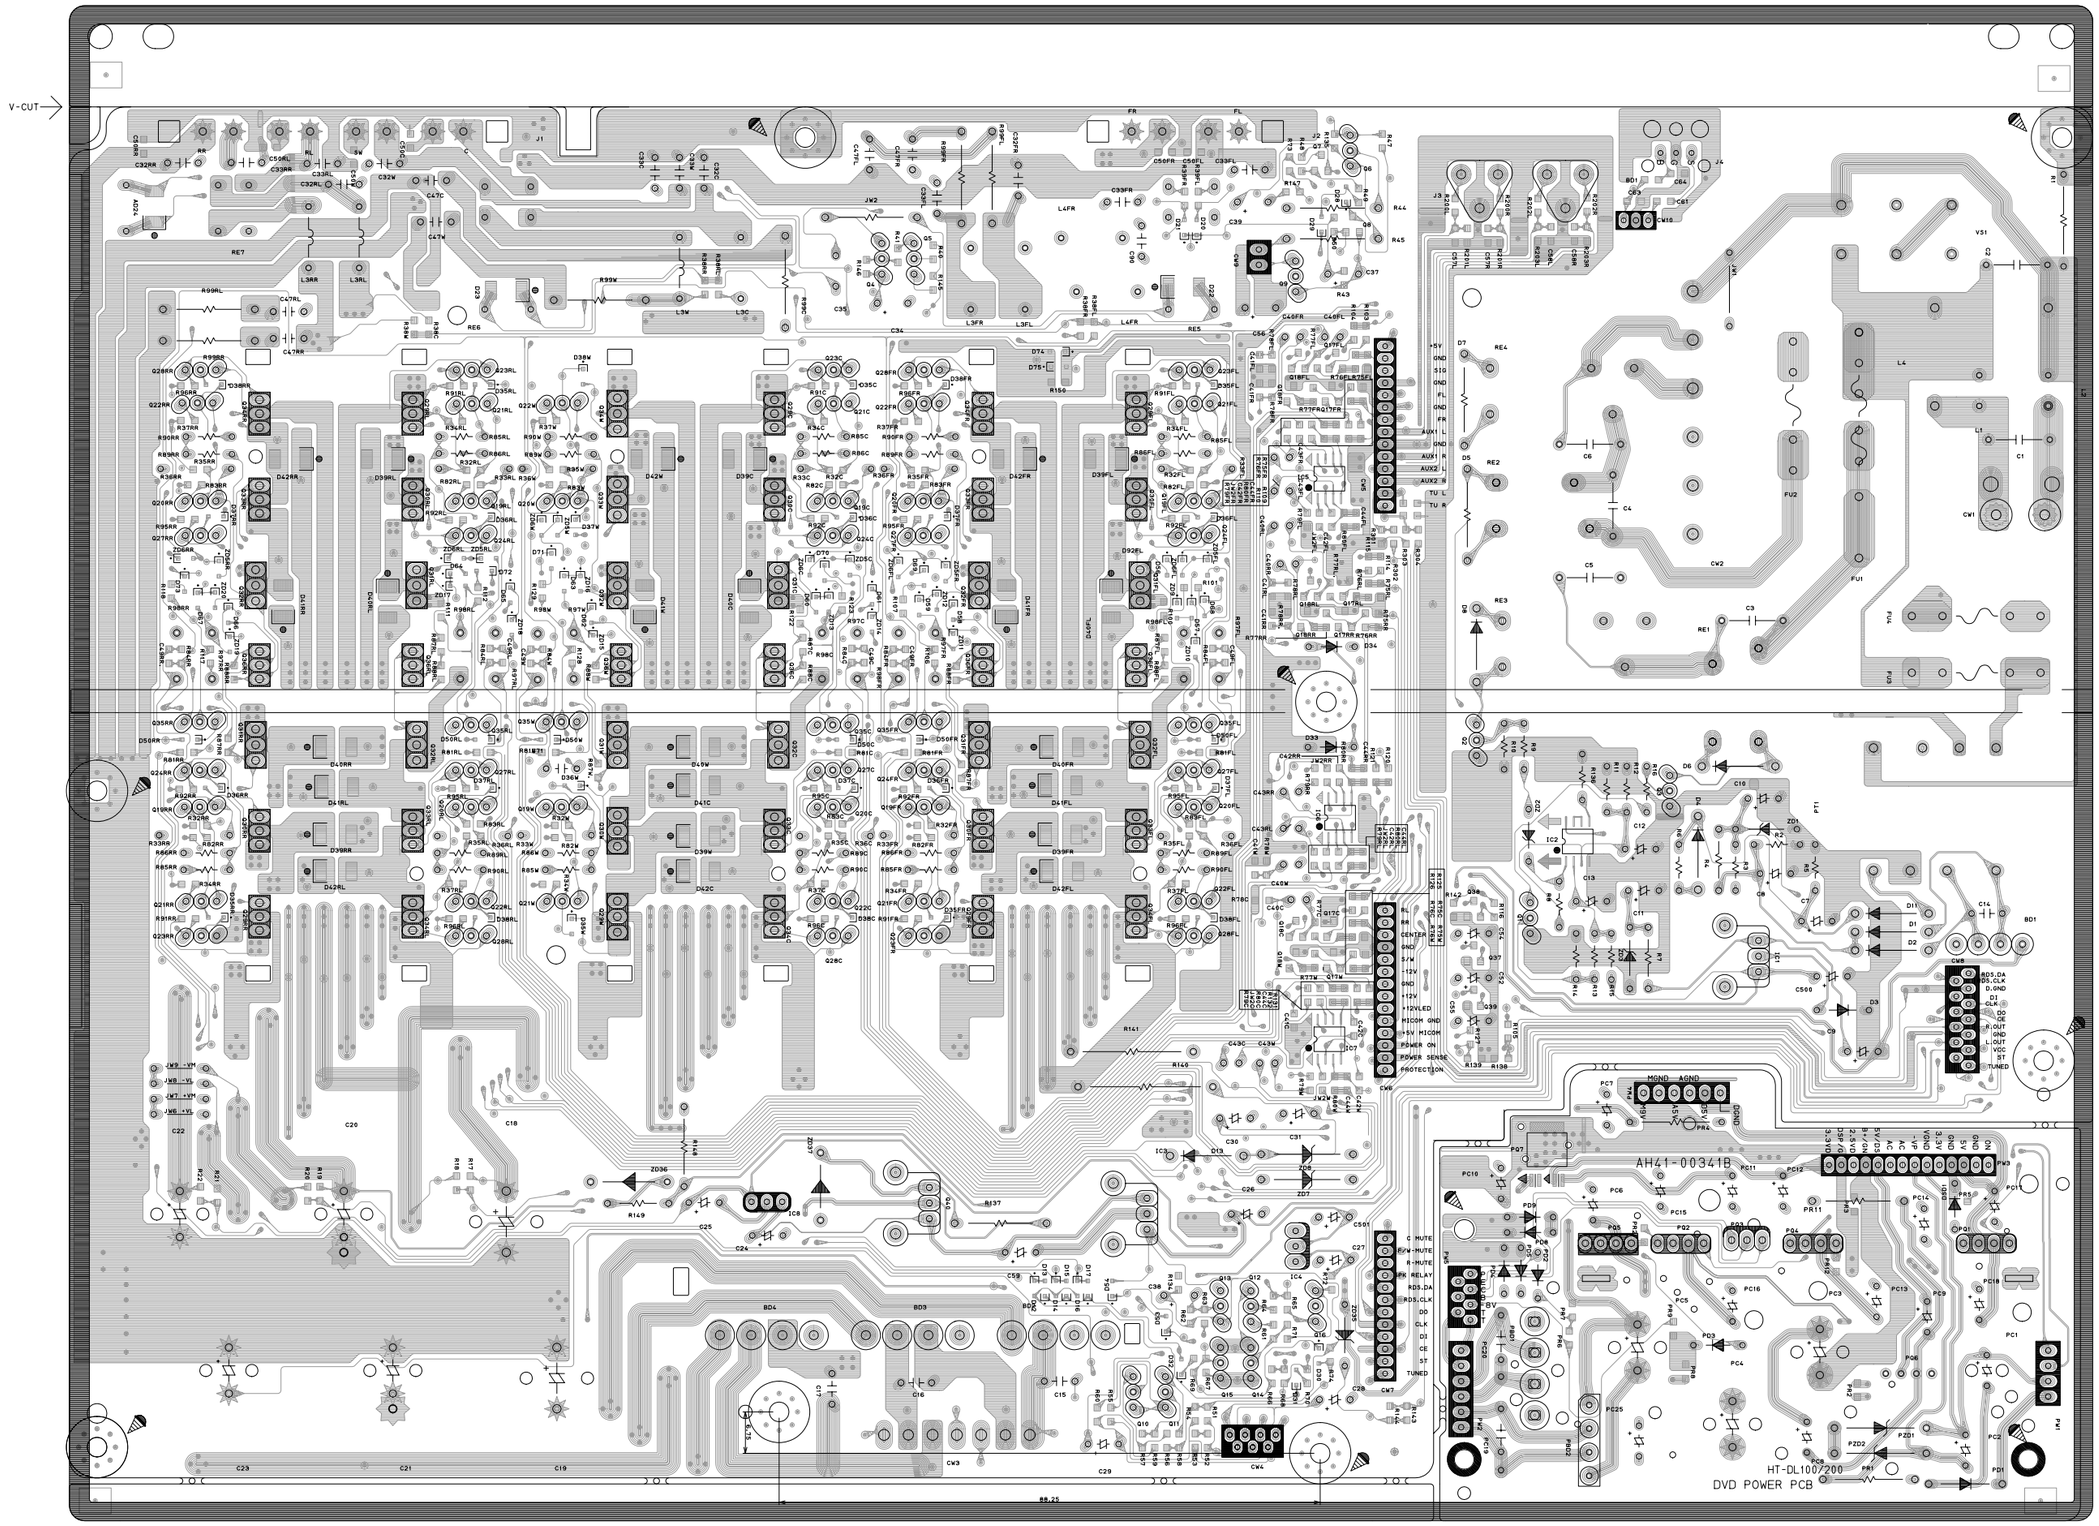

5-6 DVD MPEG

* TOP VIEW

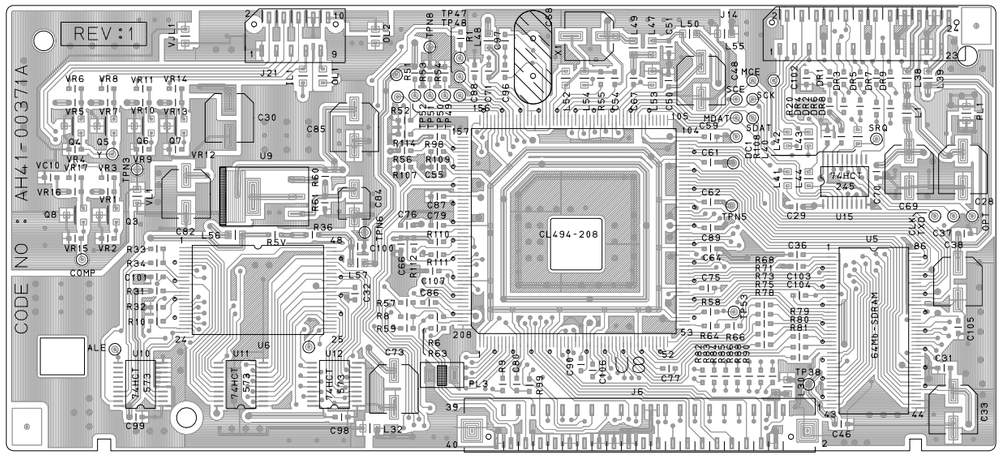

* BOTTOM VIEW

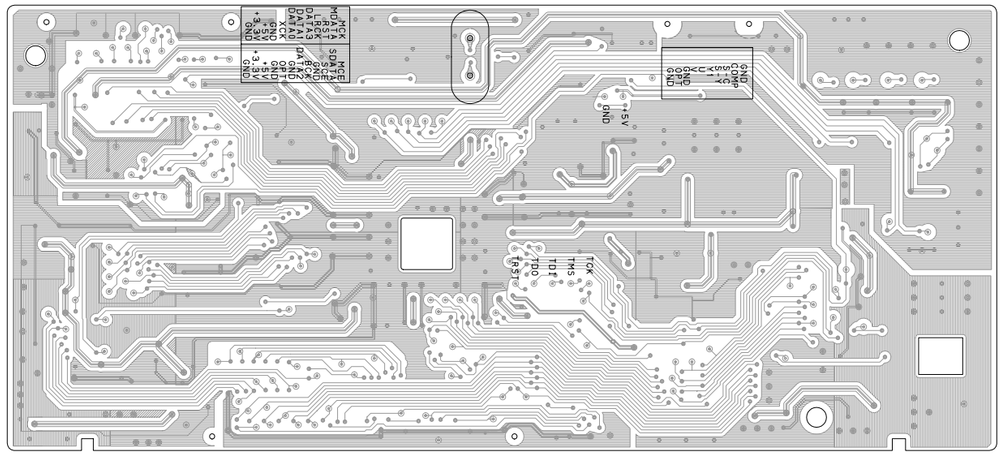

5-7 DVD LOADER (VERSION 1)

* TOP VIEW

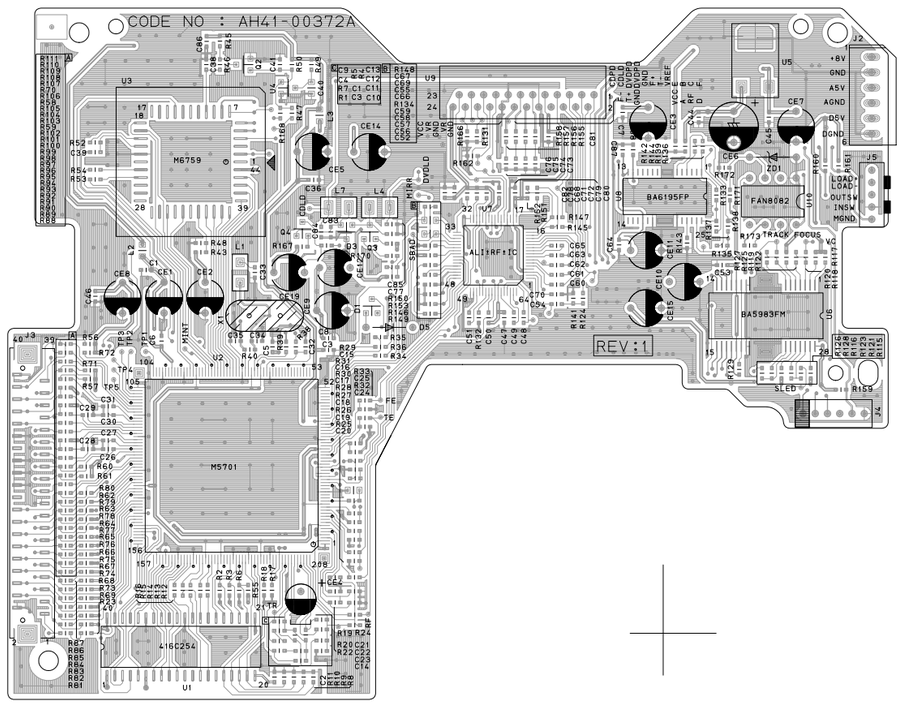

* BOTTOM VIEW

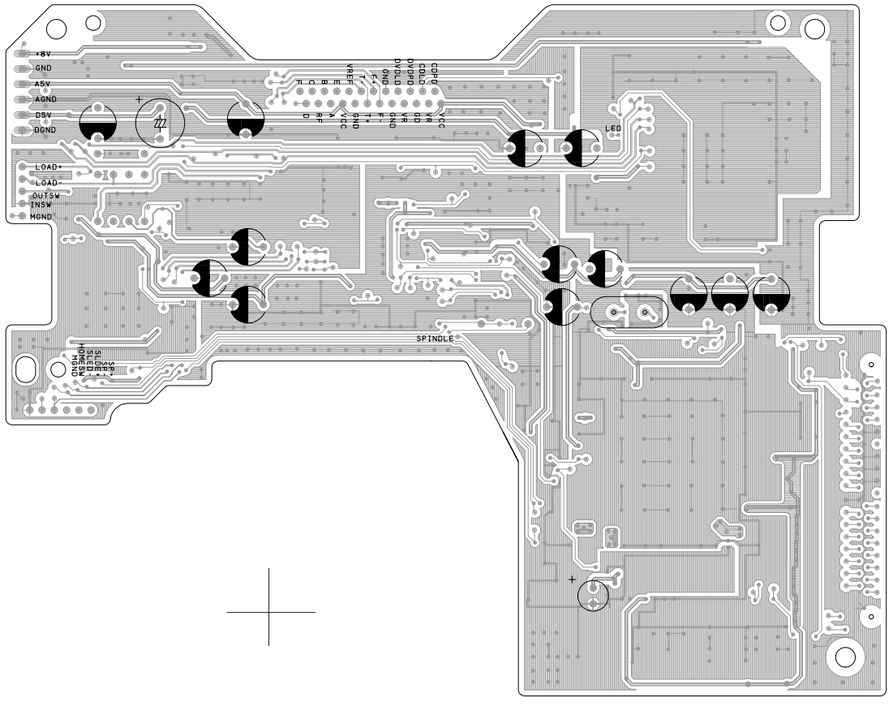

5-8 DVD LOADER (VERSION 2)

* TOP VIEW

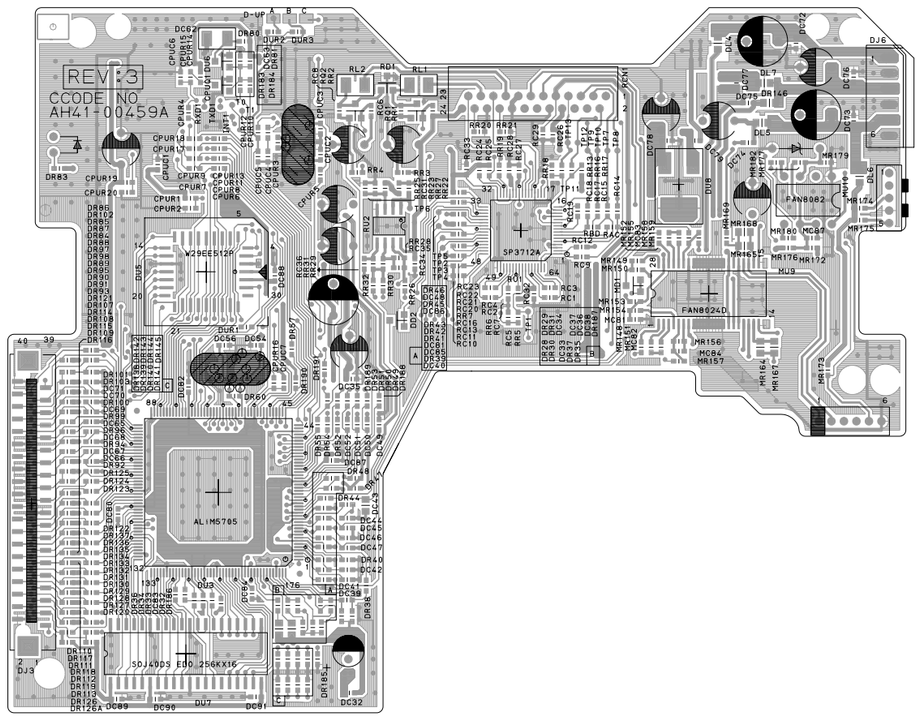

* BOTTOM VIEW

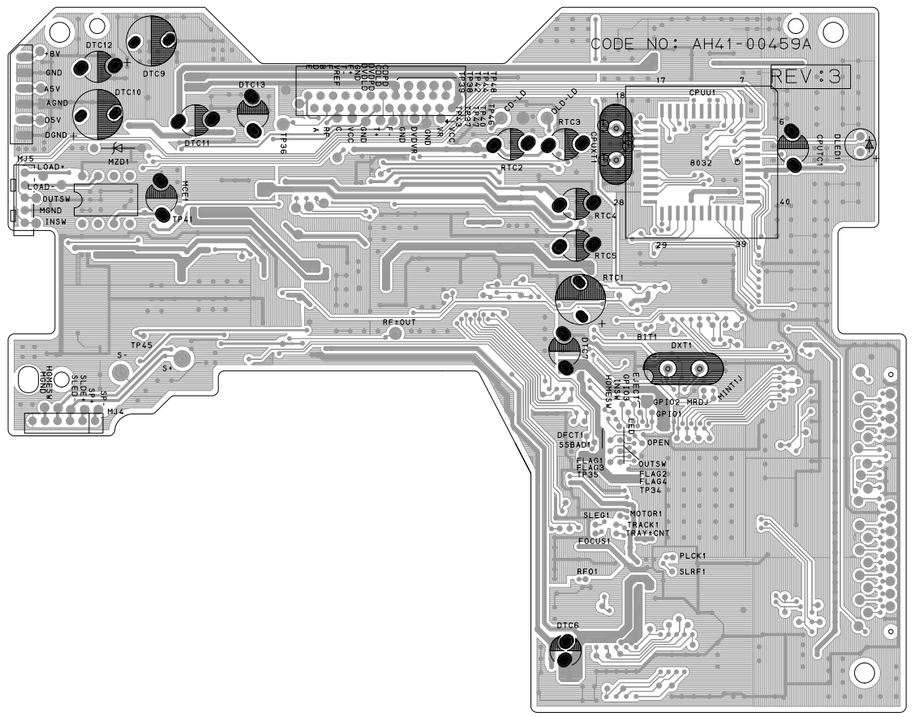
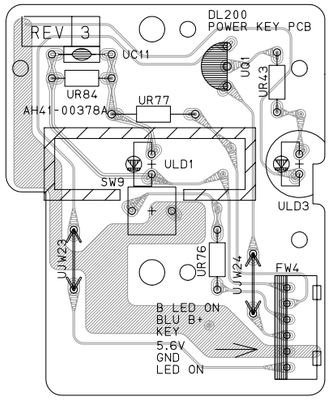
5-9 STAND BY